


Containment Boom #C-BOOM10-100 - 4" Float / 6" Skirt 100'/section

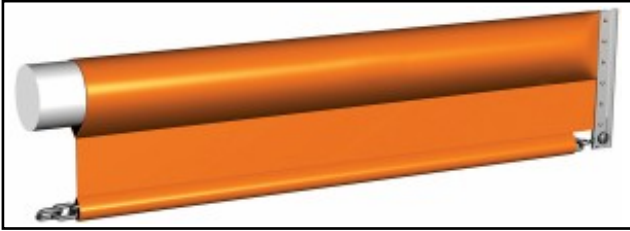

Quickly contain spills and debris on calm, shallow waters. Our light-duty non-absorbent Boom floats to keep oil from spreading into or out of a contained area while the skirt hangs below the surface to help prevent spills from creeping underneath.

- Internal foam float forms a barrier against oil and debris above the surface
- Flexible PVC skirt hangs below surface to keep pollutants from escaping; ballast chain adds weight to help keep skirt taut
- Hinge points provide stability, float integrity and durability; connect Booms together to form any length
- Quick and easy to deploy, even using a small boat with outboard motor
- Light-weight, light-duty Boom is ideal in water intakes, channels, API separators, ponds, lakes, streams, marinas, canals, ditches and other shallow areas with minimal flow

C-BOOM10-100 Specifications

Dimensions:	100' L x 10" H
Shipping	60" W x 60" L x 70" H
Dimensions:	
Sold as:	1 per package
Color:	Orange
Composition:	22oz PVC Fabric
Weight:	110 lbs.
# per Pallet:	10
Incinerable:	No
Ship Class:	100

Metric Equivalent Specifications

Dimensions:	30m L x 25.4cm H
Shipping	152.4cm W x 152.4cm L x 177.8cm H
Dimensions:	
Weight:	49.9 kg

C-BOOM10-100 Technical Information

Warnings & Restrictions:

There are no known warnings and restrictions for this product.

Regulations and Compliance:

40 CFR 112.7(c)(1) - Facilities must have "appropriate containment and/or diversionary structures to prevent discharge oil from reaching a navigable water course."

33 CFR 154.1047(c)(2) - Concerning navigation and navigable waters, a facility which handles, stores or transports Group V petroleum oils must identify response plan resources such as containment booms and other methods.

Technical Documents:

(Available at spilltech.com)

Product Data Sheet (PDS)

Chemical Compatibility (CCG)



SpillTech

Online:
spilltech.com

Phone:
1-800-228-3877 (N.Am.)
1-770-475-3877 (Other)

Fax:
1-800-872-3764 (N.Am.)
1-770-410-1812 (Other)

Email:
sales@spilltech.com