


Containment Boom #C-BOOM10-50 - 4" Float / 6" Skirt 50'/section

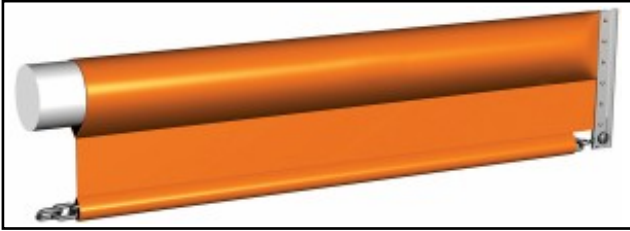

Quickly contain spills and debris on calm, shallow waters. Our light-duty non-absorbent Boom floats to keep oil from spreading into or out of a contained area while the skirt hangs below the surface to help prevent spills from creeping underneath.

- Internal foam float forms a barrier against oil and debris above the surface
- Flexible PVC skirt hangs below surface to keep pollutants from escaping; ballast chain adds weight to help keep skirt taut
- Hinge points provide stability, float integrity and durability; connect Booms together to form any length
- Quick and easy to deploy, even using a small boat with outboard motor
- Light-weight, light-duty Boom is ideal in water intakes, channels, API separators, ponds, lakes, streams, marinas, canals, ditches and other shallow areas with minimal flow

C-BOOM10-50 Specifications

| | |
|----------------------|-----------------------|
| Dimensions: | 50' L x 10" H |
| Shipping | 60" W x 60" L x 70" H |
| Dimensions: | |
| Sold as: | 1 per package |
| Color: | Orange |
| Composition: | 22oz PVC Fabric |
| Weight: | 55 lbs. |
| # per Pallet: | 20 |
| Incinerable: | No |
| Ship Class: | 100 |

Metric Equivalent Specifications

| | |
|--------------------|-----------------------------------|
| Dimensions: | 15m L x 25.4cm H |
| Shipping | 152.4cm W x 152.4cm L x 177.8cm H |
| Dimensions: | |
| Weight: | 24.9 kg |

C-BOOM10-50 Technical Information

Warnings & Restrictions:

There are no known warnings and restrictions for this product.

Regulations and Compliance:

40 CFR 112.7(c)(1) - Facilities must have "appropriate containment and/or diversionary structures to prevent discharge oil from reaching a navigable water course."

33 CFR 154.1047(c)(2) - Concerning navigation and navigable waters, a facility which handles, stores or transports Group V petroleum oils must identify response plan resources such as containment booms and other methods.

Technical Documents:

(Available at spilltech.com)

Product Data Sheet (PDS)

Chemical Compatibility (CCG)



SpillTech

Online:
spilltech.com

Phone:
1-800-228-3877 (N.Am.)
1-770-475-3877 (Other)

Fax:
1-800-872-3764 (N.Am.)
1-770-410-1812 (Other)

Email:
sales@spilltech.com